



# INSTALLATION INSTRUCTIONS FOR THE A4041-002 VAPOR RECOVERY SPLITTER MANIFOLD FOR MOUNTING THROUGH THE DISPENSER WALL.

- The A4041-002 Splitter Mainfold is used with the A4005 Vapor Recovery Nozzle with the built-in vapor valve.
- The A4041 adapts a UL Listed coaxial hose to the 3/4 inch NPT vapor and fuel lines inside the dispenser.
- The A4041-002 is mounted to the dispenser wall using the four mounting screws provided.
- The A4041-002 includes hardware for mounting to the dispenser wall only, use the A4041-001 Splitter for island mounting.

## INSTALLATION INSTRUCTIONS:

**WARNING: THE SERVICE STATION ISLAND IS A HAZARDOUS LOCATION, CLASS I GROUP D DIVISION 2. DO NOT USE POWER TOOLS THAT ARE NOT CLASSIFIED FOR CLASS I GROUP D DIVISION 2. INSTALLATION MUST BE IN ACCORDANCE WITH THE FLAMMABLE AND COMBUSTIBLE LIQUIDS CODE OF THE NATIONAL FIRE PROTECTION ASSOCIATION NFPA30A.**

1. Locate the center of the vapor pipe where it will exit through the dispenser wall. Mark the center location on the outside of the dispenser cabinet.
2. Using the full size pattern shown below, align the center of the large hole in the template with the center of the vapor pipe. Drill a 1.30 diameter hole for the vapor pipe and four .34 inch diameter holes for the mounting flange as shown on the template.
3. Use a length of 3/4 inch pipe long enough to make up the A4041-002 so that its flange is flush with the dispenser wall. See sketch below.
4. Use a UL Classified joint compound (DO NOT USE TEFLON TAPE) and screw the A4041 onto the vapor pipe until the flange is flush with the dispenser wall.
5. Turn the A4041-002 until the threaded ports are facing up. Bolt the flange of the A4041-002 to the dispenser wall using the four 5/16-18 one inch long screws and nuts supplied.
6. Connect the fuel line from the dispenser to the port marked —FUEL— on the A4041-002. Connect the UL Listed Coaxial Hose to the coaxial port on the A4041-002.

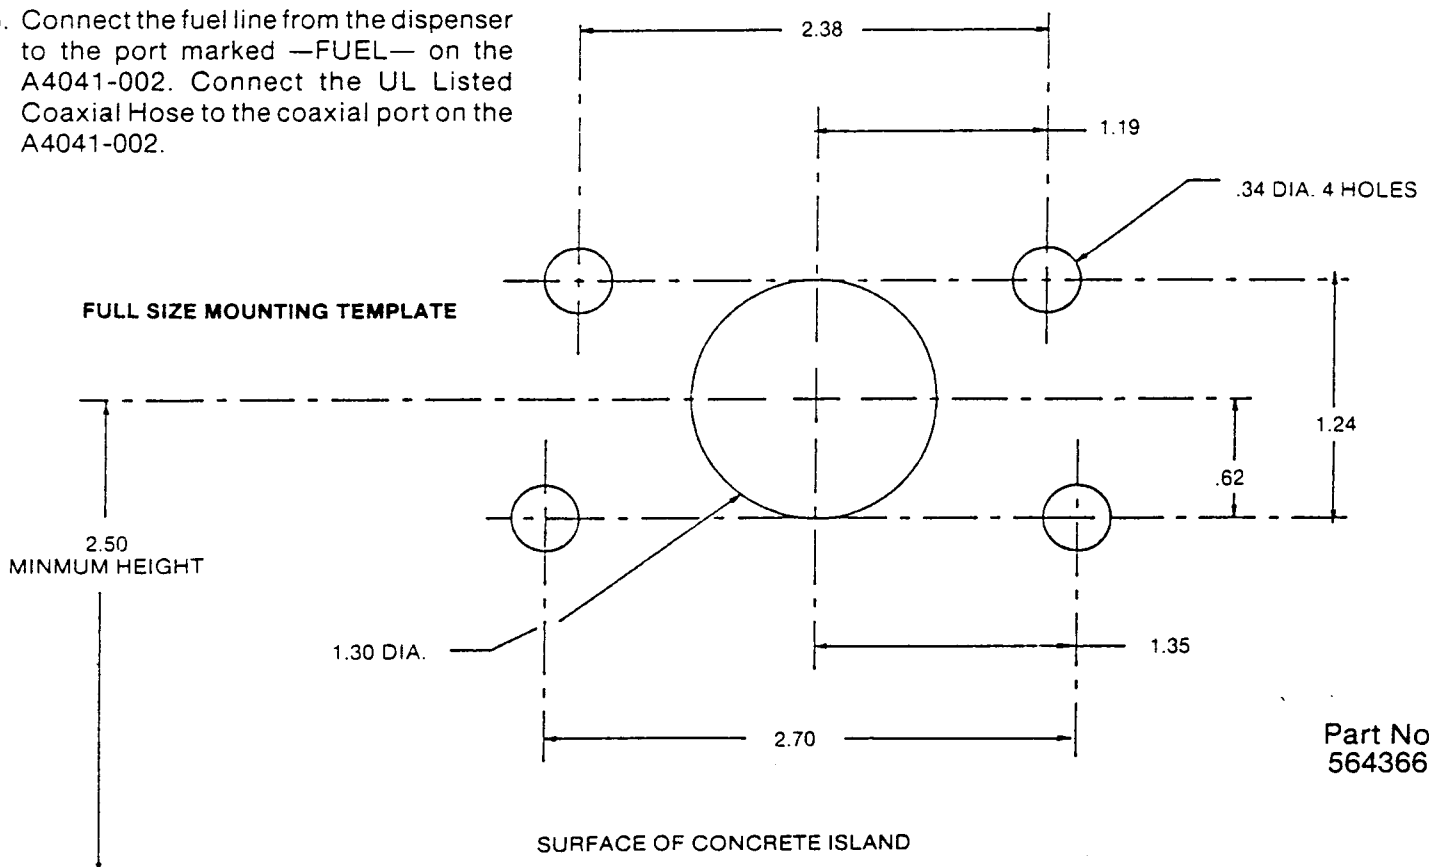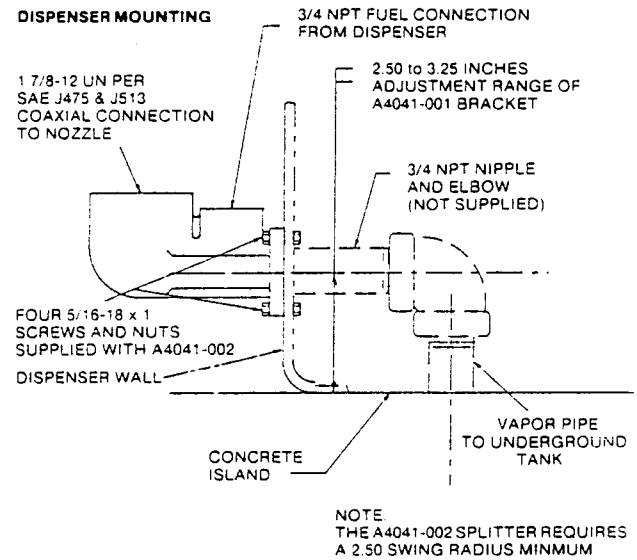

Part No.  
564366