



A0099-002,-003

Vapor Adapter Cap

INSTALLATION INSTRUCTIONS

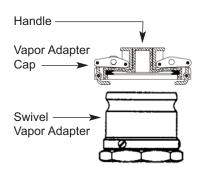

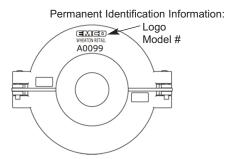

1. Locate the vapor adapter cap over the swivel vapor adapter and lock into place by pressing down on the handle.

PREVENTIVE MAINTENANCE

1. Annually verify that the gasket seal is properly secured and free of tears. If the vapor adapter cap fails to comply, replace with new.

PERFORMANCE SPECIFICATIONS

This component was factory tested to, and met, the following specifications.

1. Meets ARB Cam and Groove Specifications CID A-A-59326.

IMPORTANT: Leave these <u>installation instructions</u>, <u>product warranty</u> registration card and the <u>warranty tag</u> with the station owner and/or operator.