


Replacing Top Shear Section

1. Shut off power to the fuel pump and drain system.
2. Manually shut off valve.
3. Remove the three (3) Allen head cap screws and lift top section from valve body. Remove o-ring.
4. There are two different versions of shear valves, with different style o-rings. Refer to the drawing below to determine which style o-ring you will need. Install the new o-ring and new top section. Replace and tighten the three (3) Allen head cap screws.
5. Replace any parts which appear to have even slight damage.
6. Reattach piping to dispenser and test for leaks.

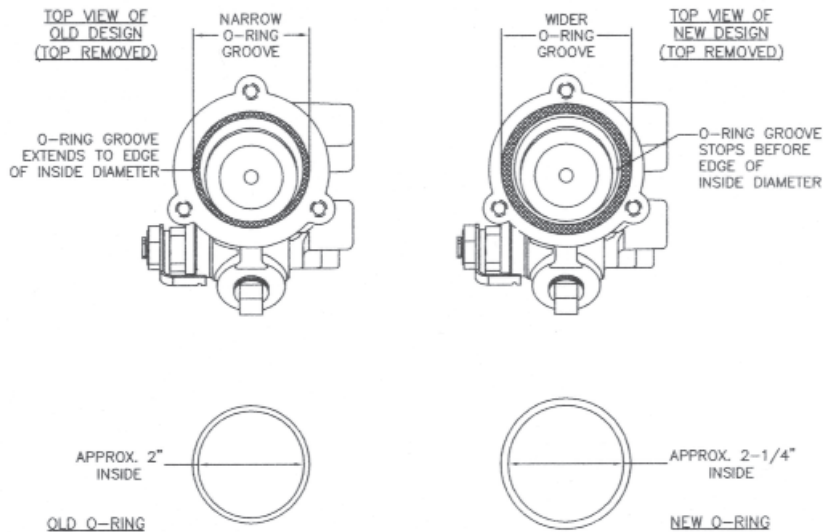

WARNING: Emco Wheaton products should be used in compliance with applicable federal, state and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. EMCO WHEATON MAKES NO WARRANTY OF FITNESS FOR A PARTICULAR USE.

EMCO®
WHEATON RETAIL

REPLACEMENT TOP KITS A0060 EMERGENCY SHUT-OFF VALVE

INSTALLATION INSTRUCTIONS



A0060 Replacement Top Kits

<u>Part No.</u>	<u>Description</u>	<u>Outlet</u>
492938	1 1/2" Replacement Top; 1 Poppet	Male
492939	1 1/2" Replacement Top; 1 Poppet	Female
493885	1 1/2" Replacement Top; 1 Poppet	Female BSP
493886	1 1/2" Replacement Top; 1 Poppet	Male BSP
493887	1 1/2" Replacement Top; 2 Poppets	Male
493888	1 1/2" Replacement Top; 2 Poppets	Female
493889	1 1/2" Replacement Top; 2 Poppets	Male BSP
493890	1 1/2" Replacement Top; 2 Poppets	Female BSP