

Installation Instructions

The A0084-038 and -103 PV Vents comply with the EPA 40 CFR Part 63 Standard: leak rate shall not exceed 0.17 cubic foot per hour at a pressure of 2.0 inches of water and 0.63 cubic foot per hour at a vacuum of 4 inches of water.

1. Before installing the PV vent, it is recommended to cycle the poppet up and down. This insures free operation of the poppet if the valve has had an extended shelf life.




Push down on the brass stem.



Then pull up on the spring.

2. An inlet screen is now included with the EPA PV vents to avoid ingestion of particles from the riser pipe that could cause the PV vent not to seal properly.

Install the vent screen on top of the 2" riser pipe as shown at right.

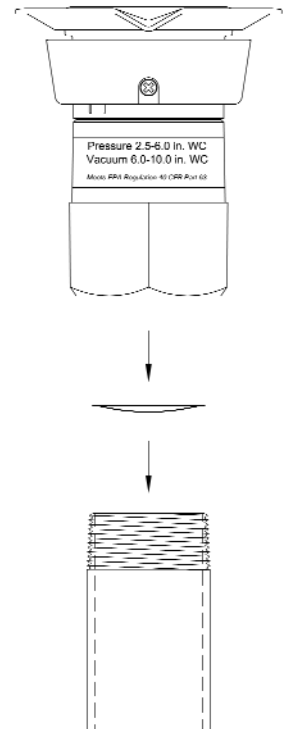

A0084-038&-338 Thread-on Style:



3. Use the A0081-084 Wrench and torque to 25 ft. lbs.