


## INSTALLATION INSTRUCTIONS

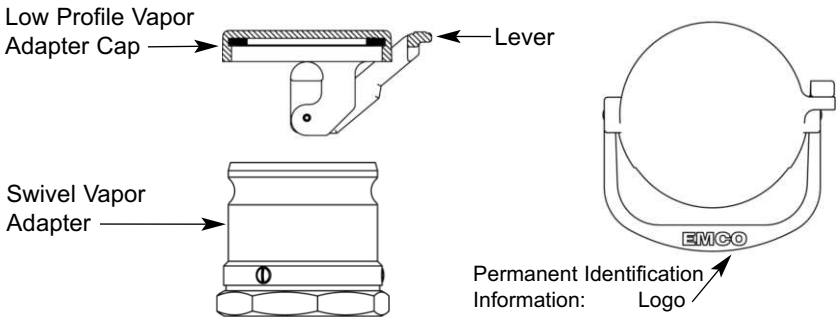

1. Locate the low profile vapor adapter cap over the swivel vapor adapter and lock into place by pressing down on the lever.

## PREVENTIVE MAINTENANCE

1. Annually verify that the gasket seal is properly secured and free of tears. If the low profile vapor adapter cap fails to comply, replace with new.

## PERFORMANCE SPECIFICATIONS

This component was factory tested to, and met, the following specifications.

1. Meets ARB Cam and Groove Specifications.

**IMPORTANT:** Leave these installation instructions, product warranty registration card and the warranty tag with the station owner and/or operator.