

## **INSTALLATION INSTRUCTIONS**

1. When installing the A0750-200 ball valve, use a pipe sealant appropriate for the application. We recommend Emco Z0838-005.
2. Use a maximum torque of 125 ft-lbs. The valves are generally tight and leak free at 75 ft-lbs of torque. Excessive torque can damage the valve.
3. Use the pipe wrench on the side of the valve body being installed to avoid damage to the valve. When installing the valve on a pipe, use the lower hex (closest to the pipe) for installing the valve. After the valve is installed and the pipe (or fitting) is being installed in the valve top threads, hold the valve in position with the top hex. Tighten the pipe (or fitting) in place.



**Emco Wheaton Retail Corporation**

2300 Industrial Park Dr. • Wilson, NC 27893  
252-243-0150 • 252-243-4759 (fax) • [www.emcoretail.com](http://www.emcoretail.com)