


Replacing Top Shear Section

1. Shut off power to the fuel pump and drain system.
2. Manually shut off valve.
3. Remove the three (3) Allen head cap screws and lift top section from valve body. Remove o-ring.
4. Install the new o-ring and new top section. Replace and tighten the three (3) Allen head cap screws.
5. Replace any parts which appear to have even slight damage.
6. Reattach piping to dispenser and test for leaks.

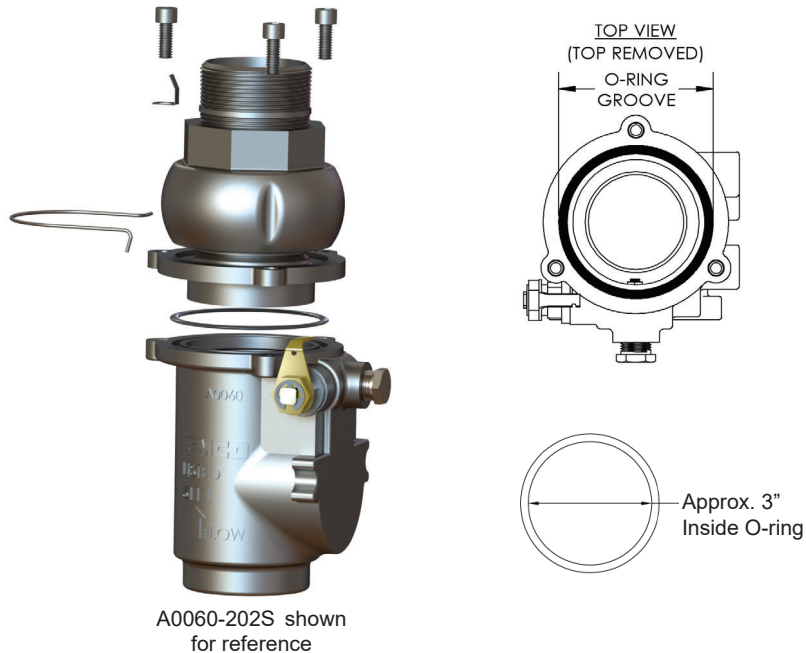

WARNING: Emco Wheaton products should be used in compliance with applicable federal, state and local laws and regulations. Product selection should be based on physical specifications and limitations and compatability with the environment and material to be handled. EMCO WHEATON MAKES NO WARRANTY OF FITNESS FOR A PARTICULAR USE.



REPLACEMENT TOP KITS A0060 2" SST EMERGENCY SHUT-OFF VALVE

INSTALLATION INSTRUCTIONS



A0060 Replacement Top Kits

Part No.	Description	Outlet
495651S	2" Replacement Top; 1 Poppet	Male
495650S	2" Replacement Top; 1 Poppet	Female
495649S	2" Replacement Top; 2 Poppets	Male
495657S	2" Replacement Top; 2 Poppets	Female
495668S	2" Replacement Top; 1 Poppet	Male BSPT
495669S	2" Replacement Top; 1 Poppet	Female BSPT
495670S	2" Replacement Top; 2 Poppets	Male BSPT
495671S	2" Replacement Top; 2 Poppets	Female BSPT