

A1004-001GAGE Gauge for Double Wall Spill Containment

Installation Instructions

- 1. Remove existing dipstick or gage.
- 2. Inspect the interstitial space to ensure that no liquid is present.
- 3. Hold the A1004-001GAGE upright and verify that the display shows the correct background color for each float position as indicated in Figure 1.
- 4. Install the A1004-001GAGE into the monitoring tube.

Note: Do not force gage into tube as damage to gage could occur. If gage does not slide easily into tube, inspect tube for obstruction.

PREVENTIVE MAINTENANCE

If annual inspections are required by state/local code:

- 1. Remove the A1004-001GAGE and visually inspect for damage.
- 2. Hold the A1004-001GAGE upright and verify that the display shows the correct background color for each float position as indicated in Figure 1.

If monthly inspections are required by state/local code:

- 1. Remove lid of spill bucket to check color of gage.
- 2. If display shows green, "OK"; no additional testing is required.
- 3. If display shows red, "TEST"; further inspection or testing of interstitial space is required.

Note: Maintenance of the A1004-001GAGE can be performed by the facility attendant, service contractor, or inspector. The maintenance log book will be maintained at the facility by the facility attendant.

