


Installation Instructions

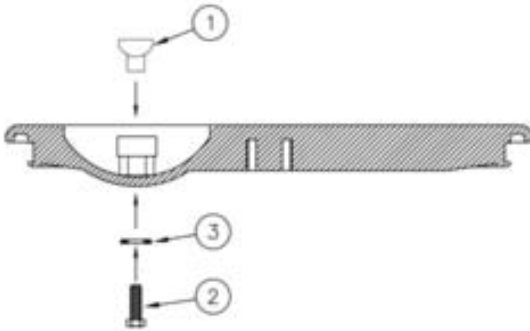


Step 1 Install handle, bolts and washer in existing lid, as shown.

Step 2 Hand tighten both bolts.

Step 3 Using a torque wrench, tighten each bolt to ten (10) ft-lbs.

Step 4 Do not overtighten bolts. Overtightening may result in cracking of both the handle and the lid.

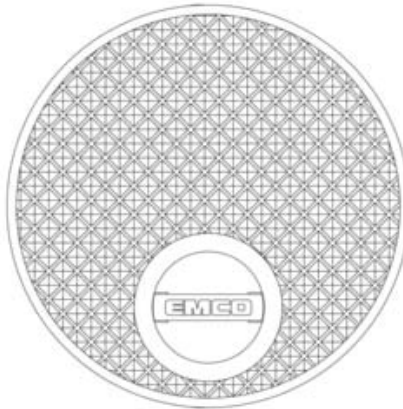

Emco Wheaton Retail Corp.

2300 Industrial Park Dr. • Wilson, NC 27893
252-243-0150 • 252-243-4759 (fax)

p/n 570613
Rev. C 11/16