


# A0785-100,-101 Mushroom Vent

## INSTALLATION & MAINTENANCE INSTRUCTIONS



### Installation

Can be used on 1½” and 2” male fittings. When installing, torque by hand. Do not use a pipe wrench as damage to the aluminum vent may result. Recommended torque is 30 lbs/ft.

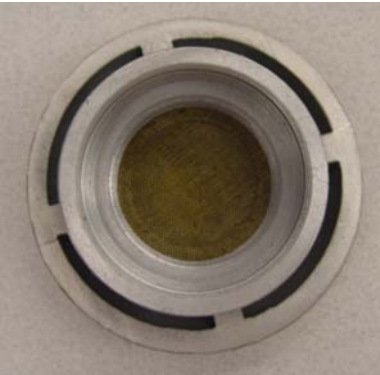

### Maintenance

One time per year, the vent should be removed and the screen inspected for debris and damage. Clean with brush and solvent, then reinstall.

### **Emco Wheaton Retail Corp.**